

## UV CURING 36W

### NAIL LAMP, CONTAINING 4 x 9W LAMPS

## User Manual




-  **TIMER**  
 . 90 seconds  
 . Continuous  
 . 120 seconds
-  **UV LIGHT**
-  **4 REPLACEABLE 9W UV LAMPS**
-  **REMOVABLE BOTTOM LID**

- Timer
- 36 Watts UV light
- Produces a natural UV light
- ON/OFF switch
- External fuse

## Warning



Do not repair, disassemble, or modify under any circumstances.

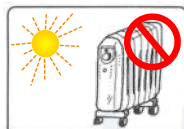


Do not place near any heat source or in direct sunlight.



Please ensure that UV nail lamp is placed on a smooth and safe desktop or platform.



Fuse replacement must be made with a 3A - 250 V fuse inside H support.

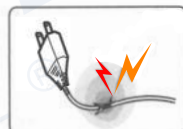


Do not use appliances with frayed or damaged electrical cords.



Do not touch UV nail lamp or electrical plug when hands are wet or near liquids.



Ensure UV nail lamp parts are always dry and away from humidity.

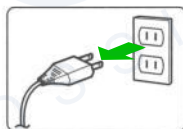

Unplug the UV nail lamp when equipment is not in use during an extended time period.



Clean only with a soft dry cloth and do not use solvents or diluted liquids.




When selecting time, you should gently press buttons.

## Specifications


|                                |                               |
|--------------------------------|-------------------------------|
| MODEL                          | 797                           |
| UV Light                       | 365 NM                        |
| Colour of machine              | White                         |
| Power of UV Lamp               | AC: 120V ~ 240V ~ 50/60 Hz    |
| Dimensions                     | 258 mm(L)*220 mm(W)*120 mm(H) |
| Weight with 4 light lamp bulbs | 798 gr                        |
| Operating Room Temperature     | -10 C ~ 40 C                  |

### Components description

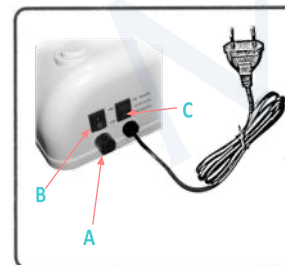


1. A - Fuse
- B - Switch
- C - Timer

### Assembly instructions

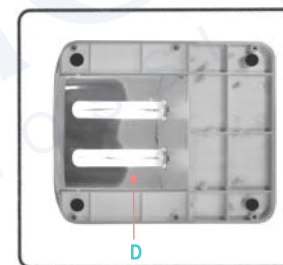

2. Remove bottom lid to place UV lamp bulbs **D** in the correct position. Insure UV lamp bulbs are properly fitted until you hear "click".

### Electric connection

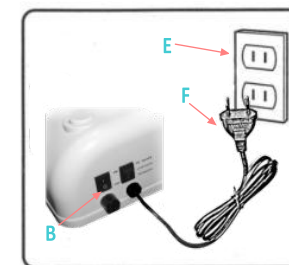


3. Confirm electrical current is in conformity with equipment's electrical specifications. Equipment is connected to electrical current **E** only when switch **B** is on 0 (OFF) position. To switch off equipment after use it is compulsory to switch off **B** to position 0 (OFF) to protect and help equipment to endure, before removing plug **F** from wall socket **E**.

## Box contains



36W UV Lamp machine

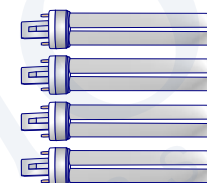

4 x 9W UV Lamp bulbs

### WARNING:

1. Do not stare at UV light.
2. UV Nail lamp 36W is not to be used continuously for more than 4 hours.
3. UV lights must be replaced when necessary with identical UV lamp bulbs as originally supplied.

Distributor : **Luís Abreu Pestana, Cosmética, Lda.**

Rua António Oliveira, nº40, Loja AM, Centro Empresarial do Oeste, Zona Industrial; 2500-916 Caldas da Rainha - Portugal  
 Phone: 262889070 Email: encomendas@lpcosmetica.pt www.lpcosmetica.pt / www.lpcosmetica.com